

# **EinScan-SP**

**Desktop 3D Scanner** 

User Manual



# Catalog

1.		Device L	ist and Specification	3
	1.1.	Device	e List	4
	1.2.	Specif	fication Parameter	5
	1.3.	Syster	n Requirement	6
2.		Installati	ion Notes	7
	2.1.	Hardv	vare Installation	8
	2.2.	Softw	are download	11
	2.3.	Softw	are Installation	12
3.		Software	e Introduction	13
	3.1.	Scan F	Preparation	14
	3.2.	First S	ican	15
		3.2.1.	Help Mode for Beginners	15
		3.2.2.	Obtain License File	15
		3.2.3.	Operation Procedure	15
	3.3.	Drop	down Menu	17
		3.3.1.	Language	17
		3.3.2.	TeamViewer	17
		3.3.3.	Feedback	17
		3.3.4.	User Setting	
		3.3.5.	Factory Default	18
		3.3.6.	Einscan Community	19
		3.3.7.	About	19
4.		Calibrati	on	20
	4.1.	Calibr	ation	21
	4.2.	Calibr	ation Precaution	24
5.		Fixed Sca	an	25
	5.1.	Help N	Mode for Beginner	26
	5.2.	Before	e Scaning	27
	5.3.	Scann	ing	29
		5.3.1.	Start Scan	29
		5.3.2.	Edit Tool	29
		5.3.3.	Manual Align	31
		5.3.4.	Delete Current Data	31
		5.3.5.	Pause	31
	5.4.	After	Scanning	31
		5.4.1.	Mesh	31
		5.4.2.	Data Post Processing	33
		5.4.3.	Save Your Data	35
		5.4.4.	Share Your Data	
		5.4.5.	Project	
		5.4.6.	Back to home	27
		5.4.0.	Back to nonice	

# Catalog

		5.5.1.	Mouse Operation Prompts	.37
		5.5.2.	Hot Key	.37
		5.5.3.	Points and Triangles	.38
			Help	
		5.5.5.	Model Viewer	.38
	5.6.		Offline	
6.		FAQ		.40
7.		Safety Pr	ecautions	.42
8.		Help		.44



# Device List and Specification

## 1.1. Device List

Items	Picture	Quantity
Scanner Head		1
Turntable		1
Scanner Stand	0	1
Scanner Bracket		1
Calibration Board		1
Calibration Board Holder		
Power Adapter	€	1
Power Cord		1
USB Cable		1
USB Cable		1
Tripod		1
Reference Point		1
Quick Guide		1

4

# 1.2. Specification Parameter

Mode1	EinScan-SP		
Scan Mode	Fixed Scan (With turntable)	Fixed Scan (Without turntable)	
Scan speed	<1min	<4s	
Point distance	0.17mm′	~0.2mm	
Accuracy	Single Accuracy:		
Suitable distance	290—4	80mm	
Light source	White li	ght LED	
Maximum scan volume	30mm*30mm*30mm	30mm*30mm*30mm	
Minimum scan volume	200mm*200mm*200mm	700mm*700mm*700mm	
Texture Scan	Yes		
Outdoor Operation	No (affected by strong light)		
Special Scan For transparent, reflective and dark object, please spray po		< object, please spray powder first	
Object	before scanning		
Printable Data Yes		'S	
Data Format	OBJ, STL, ASC,PLY		

# 1.3. System Requirement

Items	Recommended PC configuration	
Operating System	Mac OS 10	
RAM	>8G	
Graphic Memory	>1G	



# Installation Notes

## 2.1. Hardware Installation

## Scanner Set-up

• Step 1. Place the scanner head onto the bracket.



• Step 2. Insert calibration board onto the board holder . NOTE : Rotate the calibration board only while calibration.



- Step 3-1. Turntable and Scanner installation.
  - 1) Place the turntable onto scanner stand.



2) Screw the scanner into the socket on the stand.



3) Plug power cord into outlet and the back of scanner;Plug USB cable into back of scanner and computer USB port;Plug USB cable into back of scanner, and turntable.



- Step3-2. Setting scanner on tripod for fixed scan, turntable coded targets and markers align mode.
- 1) Screw the scanner head onto tripod.



2) Plug power cord into outlet and the back of scanner; Plug USB cable into back of scanner and computer USB port; Plug USB cable into back of scanner, and turntable.



# Scanner Turn-on/off

- Hold on the touch switch for about one second to turn the scanner on;
- Double-click on the touch switch and stay for one second each time to turn the scanner off.

## 2.2. Software download

#### Software download

Firstly, enter the Support page: http://www.einscan.com/support. Click "Software download", as shown below:



Secondly, please complete the registration, if registered, click log in.

Email Password Retype password CO I'm already a user, log in
Rehype password
GO
i'm already a user, log in

After take the survey, it will enter the page http://www.einscan.com/software-download

# Download & Service



Software Download EinScan-S & EinScan-Pro

EinScan\_v2.0.0 Download.exe



**User Manual** 

EinScan-S & EinScan-Pro EinScan-S User Manual Download....



Video Tutorials EinScan-S & EinScan-Pro EinScan-S Setup Video Tutorials EinScan-Pro User Manual Download.pdf EinScan-Pro Setup Video Tutorials

Finally, click the icon to jump to the page of any file to download the software.

#### 2.3. Software Installation

Double click installation package, drag the "EinScan-S" to the Application.Double click installation package, drag the "EinScan-S" to the Application. When installation is finished, there will be a shortcut of the



software on the Application

In the next step, connect the device and check whether the camera driver installation is successful, click the Mac logo on the top left corner of the desktop, select 'about the machine', open the 'overview' system report,



and see if the camera's name is normally displayed under the 'camera' in the 'hardware'

#### **Software Uninstall**

Open the Application, delete EinScan-S, as shown below.

• • •	Applications			
< >	:: ■ □□ □□			
Favorites	Name			
AirDrop	4 Chess			
All My Files	Contacts			
—	🚯 Dashboard			
iCloud Drive	Dictionary			
Applications	I Dr. Unarchiver			
	DVD Player			
Desktop	TinScan-S	_		
Documents	E FaceTime			
Downloads	Font Book			
	arageBand			
😭 shining3d	iBooks			
Devices	Image Capture			
Remote Disc	🖈 iMovie			
0	Install macOS High Sierra			
Untitled ≜	(1) iTunes			
Shared	T Keynote			
	💰 Launchpad			
desktop-Otcr52h				
deskton-879dyfa	📓 Macintosh HD 🔸 🛅 Applications 🔸 🧯 EinScan-S			



# Software Introduction

## 3.1. Scan Preparation

#### **Mode selection**

(1) Fixed Scan (With Turntable ): This mode is recommended for objects within the size of 200\*200\*200mm.

(2) Fixed Scan (Without Turntable): This mode is recommended for objects over the size of 200\*200\*200mm, as well as a comparative stable environment (without obvious vibration) are required.

Do not touch or move the object being scanned while the scan is in progress. Do not scan moving object, size smaller than 30\*30\*30mm, and objects with hollow pattern design .

#### Mark points stick

Stick mark points on the object in random, avoiding sticking in one line.Public areas alignment require at least four mark points. While placing the points, uniformly stick the mark points on the object, and make sure that in each single scan area has at least 4 points.

#### **Special objects**

Before scan objects in transparent, semi-transparent or black shall spray on the surface.

## 3.2. First Scan

Choose the device "EinScan-SP", as shown below.



#### 3.2.1. Help Mode for Beginners

Close Help Mode for Beginner by clicking the top right corner Help-mode for beginners. To open Help Mode for Beginner, go to Setting -> User Setting ->Help-mode for beginners

#### 3.2.2. Obtain License File

When a warning of license file doesn't match the scanner pops up when entering scanning mode, the license file can be acquired by clicking "Activate".

W	WARNING: The license file doesn't match the scanner. Please disable the built - in cameras first and try.				
		Choose Working Mode			
		License Tool			
	Obtain EinScan-SE lic	ense file 6			
		Online Activation			
l					

### 3.2.3. Operation Procedure



# **First Scan**



## 3.3. Drop down Menu

Click **EinScan-S** Setting from the upper left to open drop down menu.

EinScan-S Setting	Setting
About EinScan	Language 🕨 🕨
Services	TeamViewer
Hide EinScan	Feedback User Setting
Show All	Factory Default
Quit EinScan %Q	EinScan Community

#### 3.3.1. Language

This software version is including Simplified Chinese, Chinese, English, German, Japanese, Spanish, French, Korean, Russian and Turkish. Language can be switched in the **choose device type interface**.

SimplifiedChinese
TraditionalChinese
English
French
German
Japanese
Spanish
Korean
Russian
Turkish

#### 3.3.2. TeamViewer

By clicking TeamViewer, you can go to the TeamViewer interface directly without installation.

#### 3.3.3. Feedback

If you have any questions, or suggestions, please share with us by clicking "Feedback". Leave your email in " My E-mail"

# **Drop down Menu**

•	Feedback	
	Do you have any questions or suggestions for us ?	
My E-Mail*	user@gmail.com	
Industry*		1
Content*		
10		
Attachment		
(Total size<50M)		
	Submit	

#### 3.3.4. User Setting



#### **Help Mode for Beginners**

Help Mode for Beginner is the default selection, which is to guide the new users make a scan completely step by step. Close Help Mode for Beginner by clicking the top right corner

Help-mode for beginners
. To open Help Mode for Beginner, go to Setting -> User Setting ->Help-mode

for beginners

#### **User Experience Program**

To help us improve the quality and user experience of Einscan, we hope to be allowed to collect usage information to Einscan Team. This information will not identify you and does not include your project data. By default, this checkbox is selected, and we strongly recommend you to select it.

#### 3.3.5. Factory Default

System setting (brightness, turntable steps), calibration data will restore to the factory default settings. Language will be changed into English as default. Factory Default will require software restart.

## 3.3.6. Einscan Community



Official Website ( <u>http://www.einscan.com/</u> ) refers to SHINING3D official website for product and information.

Community (<u>http://www.einscan.com/einscan-experts-forum</u>) refers to SHINING3D forum for all EinScan users to discuss and share the experience.

Facebook (<u>https://www.facebook.com/groups/einscan</u>) refer to facebook for Einscan users to discuss and share the experience.

### 3.3.7. About

Software version information, and technical support mail can be found here.



# Calibration

Scanning cannot be entered if calibration is not done after installing the software. There is a WARNING: No calibration data, please calibrate first.

## 4.1. Calibration

Click 'Calibrate' to enter the interface of calibrate. If there is no calibration data, choose device type and it will enter the calibration interface automatically.

Choose Working Mode	In
Previous	Next

#### The interface of calibrate:

EinScan-SP Current Status: Calibration		
	To ensure successful calibration 1.Do not move the calibration is calibrating. 2.Make sure the calibration boo 3.Make sure the pattern is facin 4.Rotate the calibration board, doesn't move. Place the Calibration support an of the turntable as shown in Fig 0%	ooard when ard is not damaged. og the scanner. but ensure the stand d board in the center
	Snap	Exit

Calibrating your scanner is important in order to get accurate scan results. The following describes the three steps required to successfully calibrate your device.

Follow the software operation guide, adjust the distance between the projector and calibration board, and the cross from scanner should target at the calibration board n clearly.

Place the calibration support and board in the center of the turntable as shown in Figure A. Check that the calibration board is located at the center of the turntable with the Figure A pattern facing the scanner and click "Snap". Do not interfere or touch the calibration board during the calibration sequence.

# Calibration



After the 1st calibration sequence, the turntable will stop and the display will show what is in FigureB. Being careful not to move the support, remove the calibration board, rotate it 90° counterclockwise and place the board back onto the support as shown in Fig. B.



#### **Note:** Don't move the support. Only rotate the calibration board.

Being careful not to move the support, remove the calibration board, rotate it 90° counterclockwise and place the board back onto the support as shown in Figure C.

## **Camera Calibration**



Upon completion of the 3rd calibration sequence, the software will automatically calculate and archive the current conditions. This calculation may take several seconds but once complete, you are ready to start automatic turntable scanning.



When calibration is finished, the software will close the calibration window automatically and enter the scan mode selection page.

If the calibration fails, please try to re-calibrate following the instructions above. If calibration fails again, please contact your local support representative.

## 4.2. Calibration Precaution

You must finish all the calibration steps according to the instruction when you calibrate at the first time. Situations as below need do calibration again:

 $(1)\,$  When the scanner is used for the first time or after long time without using.

2 2 When there is strong vibration during the transportation.

③ When alignment mistake or failure frequent appear during the scanning.

④ When scanning data is incomplete and quality is much worse during the scanning.



## 5.1. Help Mode for Beginner

Choose Fixed Scan, as shown below, click "Next".



Help Mode for Beginner is the default selection, which is to guide the new users make a scan completely step by step. Close Help Mode for Beginner by clicking the top right corner

Help-mode for beginners
. To open Help Mode for Beginner, go to Setting -> User Setting ->Help-mode

for beginners

Under the Help Mode for Beginner, following the guidance step by step, you will finish a scan following: New Project -> Texture/Non-texture ->adjust brightness -> start scanning -> Edit -> ->Continue Scan/Mesh -> Mesh type: Watertight/ Un-watertight -> Post Processing -> Save data

### 5.2. Before Scaning

Enter the interface of New Project and Open Project, the default project save location is the desktop, then it will remember where the user last created a new project. Click "New Project", enter the project name, then click 'Save' to enter the interface of Non-texture Scan and Texture Scan selection.





Choose 'Texture scan' to enter the white balance test.

#### White Balance Test

When scanning a colored object, you'll need to perform a white balance test to achieve better scanning results. Place a sheet of white paper as shown below on the calibration plate and click "Restarting white balance test? ".



After the white balance test has completed, you are free to continue with the texture scan.

#### Adjust Brightness

Adjust the distance between the object and device (suitable working distance is 290 ~ 480mm), until the cross is clearly to be seen on the object.

Most users will find that the automatic settings work just fine but for more complex objects or lighting conditions, you can manually adjust scanner settings.

Choose your desired brightness setting if the object is over or under exposed. Click "Apply" to confirm, or click " Cancel " to not save.

elect the shade that most close	ly matches your object		
<b>O</b>			
Bright: Choose for light color objects	Medium: Choose for objects neither bright or dark	Dark/difficult to scan: Choose for objects difficult to scan, such as dark, gloomy, shiny or fuzzy.	Bright&Dark: Choose for objects bright and dark
Bright	1 1 1	J. J. J.	Dark
	Apply	Cancel	

Enter the interface of fixed scan, check "With Turntable"

	EinScan-SP Current Status: White Light Fixed Scan	
	Start Scan	
		(2)
		<b></b>
Right Camera		
WB Test With Turntable		
Turntable Steps( 8-180 ) 8		
Align Mode		
O Turntable Coded Targets		
Turntable     Feature		
Markers		
and the second		
		<u></u>
Points 0		Î
Triangles 0	Left Mouse : Rotate   Middle Mouse: Pan   Scroll Wheel Zoom	
	Let mouse - rotate (mouse mouse an ) Scroll wheel 200m	

**Work distance:** Adjust the distance between the object and device (suitable working distance is  $290 \sim 480$ mm), until the cross is clearly to be seen on the object.

#### **Camera viewport**

Tick **Right Camera** to display the right camera viewport and texture camera viewport. The left camera viewport always display.

Click 🔍 in the lower right corner of the camera viewport to zoom the camera viewport



#### **Adjust Brightness**

Drag the button to adjust the brightness. The brightness is appropriate at the right scan distance: equipment against objects, the cross is clearly in the brightness viewing window. This function is the same as the adjust brightness when new a project.

With Turntable If you don't choose "With Turntable" option, you will get single piece of data; if choose this option, the scanner will use turntable to scan and choose turntable steps.

## Turntable Steps (8-180)

#### **Turntable Steps**

Before scanning, you can set the scan times per round under turntable scan. The default setting is 8 times.

## Align Mode

- O Turntable Coded Targets
- D Turntable
- Feature
- O Markers

The default is turntable align mode, you can also choose markers, turntable coded targets and feature align mode. Align mode can be re-selected after the turntable has rotated one circle. You can



If you choose turntable coded targets, you must set the scanner on tripod.

Align Mode



- 1. Choose turntable coded targets align mode, Please make sure that the object won't block the coded targets on the turntable. You can set scanner on tripod. Or, there will be no fringe pattern, while turntable will be still rotating.
- 2. If the scanned object is too high and will block the coded targets on turntable, you can stick mark points on it (if allowed) to continue auto scan. At this time, please make sure that the coded targets on the turntable are covered, so as not to affect the scanning. Make sure that in each single scan area has at least 4 points. Refer to Scan Preparation.

#### HDR HDR OFF

Enable HDR brightness can scan bright and dark objects. The function is the same as Adjust brightness "Bright&Dark".

## 5.3. Scanning

#### 5.3.1. Start Scan



Click the button or press space button to start scanning. After the turntable has rotated one circle, you can change with turntable or not, turntable steps and align mode.

## 5.3.2. Edit Tool



Edit buttons: 1) Deselect 2) Revert 3) Delete 4) Undo 5) Show/Hide

#### Stripes 6 Shift + Left mouse: choose data

You can edit the current part data after each scan. You can do the below edition if the data has excess parts, both data and mark points can be edited.

SHIFT+Left mouse: Select excess parts, the selected section is displayed in red, as shown below.





#### **Delete selected data**

Click the button and "DELETE" in the keyboard to delete selected data.



You can only undo the last deleted data.



#### **Show/Hide Stripes**

Click the button to switch the texture display and hide. Non-texture scan, there is no such button.



#### **End single-piece edit**



Click to save data and exit the single-piece

edition; Click , delete the current scan dat.

After end the single-piece edit, the right toolbar will display, and now can edit the whole scan data. The specific operation is the same as the single-piece edit.





### 5.3.3. Manual Align



If automatic alignment failed during scanning, you can use manual align. Click the button to open Manual Align view port on the left side of the software. Keep SHIFT down, and click left mouse button to select at least 3 non-collinear corresponding points in the 3D preview windows for Manual align, As shown on the right.

### 5.3.4. Delete Current Data

#### **Delete the Current Data**

If you are not satisfied with current scanning data, or there is not enough overlapping region for registration, click the button to delete current data and then change the position of the scanner or the object to scan again.

When auto scan mode is scanning, you can click the button to stop the current scan. The current data will be deleted directly.



#### 5.3.5. Pause



#### Pause

Click the button, scanning will pause; Click again to resume scanning.

#### 5.4. After Scanning

#### 5.4.1. Mesh



When the scan is completed, click the botton, proceed to post-processing. You will see two modes after clicking the button: Watertight and Unwatertight. Watertight usually slower than unwatertigt. Texture scan mode will take more time compared to Non-Texture scan mode.



#### Watertight

Closed model can be printed directly. After choose this mode, you should select the object details.

Watertight Model Select High for objects with fine texture, select Med or Low for objects in smooth surface or with less detail. The time for data processing is in relation to the detail setting. The higher the level of details is, the longer time the processing takes. It may keep for a long time in 95%, please be patient.

Select the object details:





#### Unwatertight

Unclosed model. The following picture is the watertight and unwatertight model.



Watertight



Unwatertight

Texture watertight results :



#### 5.4.2. Data Post Processing

After meshing, the following dialogue box of data post processing will appear. You can simplify the data per your request, do fill holes, sharpening or smoothing operations. Unwatertight and watertight, the post processing of the interface as shown below.

Simplification
Original size Post Simplification
STL (MB): 14.80 14.80
OBJ (MB): 18.50 18.50
Polygons: 299745 299745
implification ratio 100
-
Hole Filling
Markers
Hole Length 100 mm
nor zongu roo
Hole-filling:choose 10-100mm perimeter to fill the hole
Smooth Sharpen
A
Apply
Unwatertight

#### Data simplification

After simplification, the polygon numbers, size and surface detail of data will be reduced accordingly. Check the simplify check box and set the ratio, the default is 100%.

The comparison of detail between before simplification and after simplification (at 30% simplify proportion).



Before simplification

After simplification

#### Fill holes

The default does not check the mark point and fill hole, check the fill hole you need set perimeter, choose 10-100mm perimeter to fill the hole, less than the perimeter of the hole will be filled. Mark point fill hole as an example.



After



## Note:

- 1. If the edge of the hole is not smooth may cause the effect is not good, not recommended to fill hole.
- 2. Hole-filling: choose 10-100mm perimeter to fill the hole;

#### Smooth

The data to denoise processing, improve data quality, the figure before and after smoothing:



Before smooth

After smooth

#### Sharpen

Improve the overall clarity of the data, the figure below before and after sharpening:



Before sharpen

After sharpen

#### 5.4.3. Save Your Data



Before merging can save data as asc single. After merging, it can be saved as asc, stl, ply and obj. To save color texture, please select Ply and obj.

#### Scale

Scaling the volume of scanning data, while the quantity of triangular facets and size of data will not be changed. Scaling result as reference: From left to right shows double size, original size and half size respectively.

Original size(mn	n) After scaling(mm)
87.30	87.30
*	*
109.04	109.04
*	*
91.55	91.55
Scaling ratio	100
	4
S	cale

Scale window

Scale result

### 5.4.4. Share Your Data

Click the button after merging to share data, it will show the dialog as below. You can share your model to Sketchfab, while model title, username and user password are required. Register an account and look at the shared model at http://sketchfab.com.

Note: Sketchfab Normal account can only upload data maximum 50M, while Professional account can share maximum 200M, and set model as private.

C     EinScan uploader		
Sket	cchfab <sup>Uploader</sup>	
Share the current model to Sketchfab.com		
All fields marked with an * are mandatory.		
Click here to register for a free Sketchfab account.		
Model Title*	einscan-sp	
Description:		
Tags (comma separated)	einscan-sp	
Make model private:	PRO account required	
Password		
Sketchfab Username*:		
Sketchfab Password*:		
Submit Mod	el Cancel	
information		

## 5.4.5. Project



You can new or open projects. The default project location is the desktop, then it will remember where the user last created a new project.



The projects created by auto scan and fixed scan can be reciprocally imported. After importing the project, direct access to scan, choose the scan mode based on whether the imported project is texture.

### 5.4.6. Back to home



If you want to change the scan modes, click the button to go back to the homepage to select the scan mode.

### 5.5. Others

#### 5.5.1. Mouse Operation Prompts

Lower left corner of the interface is the mouse operation prompts:

- After scanned or imported project, the prompt text is as follows:
   Hold down the left mouse button: Rotate the object;
   Hold down the middle mouse button: pan the object;
   Hold down the mouse wheel: Scroll up and down to the object; scroll down to enlarge the object;
   Hold down the Shift + left mouse button: select the area on the object;
   Delete: Delete the selected area.
- Manual align, the prompt text is as follows:

Press and hold shift + left mouse click: Select point to start manual align

#### 5.5.2. Hot Key

**Space button:** To start scan or during single-piece edit to save data and exit the single-piece edition.

## 5.5.3. Points and Triangles



Current Points and Triangles

When scanning it will show the current points and current triangles in the lower right corner. When you edit the scan

data, the current points and the current triangles change in real time.

#### 5.5.4. Help



Click this button to get the operation manual and notes in more detail under the current step.

The following picture shows the help information of new project.



#### 5.5.5. Model Viewer

Einscan software can be a 3d viewer for ASC, OBJ, STL format file. Drag the 3d model to Einscan software under scanning mode interface.



## 5.6. Work Offline

You can use software without scanner connection. You can do edition, manual align, delete, mesh, save data, share data and so on.





1. What if no scan data when the turntable has rotated one circle?

Solution: Please make sure that the object won't block the mark points on the turntable. Or, there will be no fringe pattern, while turntable will be still rotating. If the align mode is mark point, please make sure that the marks on the turntable are covered, so as not to affect the scanning. Make sure that in each single scan area has at least 4 points.

2. What if the merging fails without mark points when the turntable has rotated several circles or when it is under f ixed scan mode?

Solution: Try to make sure there are at least 1/3 overlap between the current scan area and the previous scan area and the object surface should be featured. For objects which are symmetric and without rich features, using mark points or manual merger is recommended. 3. How to scan objects in transparent, semi-transparent or black?

Solution: Scan before spraying on the surface.

4. Under auto scan mode, if the turntable is not moving, but with a humming sound, how to solve?

Solution: Disconnect power line and connect again in few seconds.



# Safety Precautions

# **Safety Precautions**

- Keep well-ventilation. Environment temperature shall below 40 Celsius degree, and do not use the device under an environment with flammable or corrosive gases or another similar environment.
  - Please grab and place gently in the proper position, and do not squeeze it. Prepare precautions like sunscreen, rain-proof, shock-proof and etc. No matter on sunny or rainy days.
  - If the device could not function correctly, fixing the device by opening it by yourself is not allowed. The device shall be repaired by professional technicians or under their instruction.
  - > You should send the device to facilities with qualification for recycling it instead of dropping into the household garbage when it is scrapped.



# Help

# Help

## Contact us

Email: <u>einscan\_support@shining3d.com</u>

## More scanning information

More scanning information can refer to <u>http://www.einscan.com</u> ---Support